 
 


BOOK A LAUNDRY PERIOD

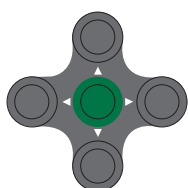

BOOK A LAUNDRY PERIOD

- Place the cursor on Boka.
- Press the green button.
- In this example, Tvätt, Bastu or Lokal can be booked. Move the cursor using the arrow keys, select Tvätt (for example).
- Press the green button.
- Move the cursor to the day and time required. (The period booked is displayed as: ---- .)
- Press the green button.
- Select laundry room.
- Press the green button again.
- Confirm the booking with **Ja** and press the green button.

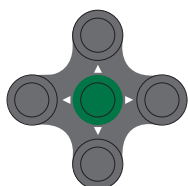 


CANCEL A LAUNDRY PERIOD

- Move the cursor to Visa/Avboka.
- Press the green button. (If you have several bookings, select which laundryperiod to cancel by using the arrow keys.)
- Confirm the cancellation with **Ja** and press the green button again.

DISPLAY YOUR BOOKINGS


- Move the cursor to Visa/Avboka.
- Press the green button.
- Browse among bookings using the arrow keys.

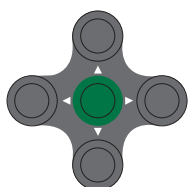

DISPLAY ALL BOOKINGS

- Place the cursor on Boka.
- Press the green button.
- Select Tvätt and press the green button.
- Use the arrow keys to view free laundry periods.

 - 1 = Tvättstuga 1 available.
- 2 = Tvättstuga 2 available.
- 3 = Tvättstuga 3 available.
- 4 = Tvättstuga 4 available.
- = not available laundry period.

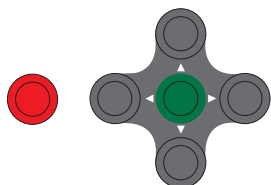


OPEN THE DOOR

- Move the cursor to Öppna.
- Press the green button.

For errors/undo

- Press the red button until you arrive at the required menu.

 BOOKING EXAMPLE

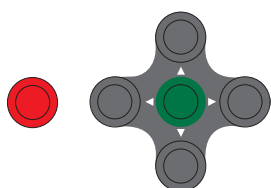

onsdag 30 januari 10:40

Vad skall göras?

- Boka
- Visa/Avboka
- Öppna

 
Cursor on **Boka**, press the green button.

onsdag 30 januari 10:40

Vad skall bokas?

- Tvätt
- Bastu
- Lokal

Select using the up or down arrow, then press the green button.

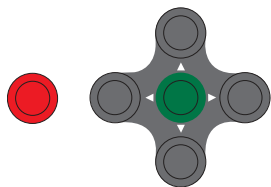

onsdag 30 januari 10:40

Pass	Mån 28	Tis 29	Ons 30	Tors 31	Fre 1	Lör 2	Sön 3
07:00-10:00	-2-6	125-	125A	125A	-256	1256	-256
10:00-13:00	1256	1--6	1--6	1---	1256	1---	1256
13:00-16:00	--56	1256	12-6	1-56	1--6	1-56	1--6
16:00-19:00	125-	1---	1256	12-6	1256	12-6	1256
19:00-22:00	25-	1256	1256	1256	1-56	1256	1-56

Januari v 5

 
Select day and date using the right or left arrow keys.
Select period using the up or down arrow keys.
Then press the green button.
If you want to cancel? Press the red button.

onsdag 30 januari 10:40

Välj tvättstuga

- Tvätt 1
- Tvätt 2
- Tvätt 3
- Tvätt 4

Select laundry room.
Then press the green button.

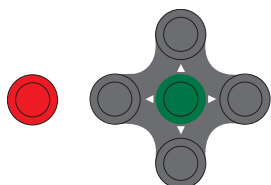

onsdag 30 januari 10:40

Tvättstuga 1
Fredag 1 februari v 5
Pass: 16:00-19:00

Önskas bokning?

- Ja
- Nej

To confirm the booking, select **Ja** and press the green button.
To cancel, select **Nej** and press the green button or just press the red button.